

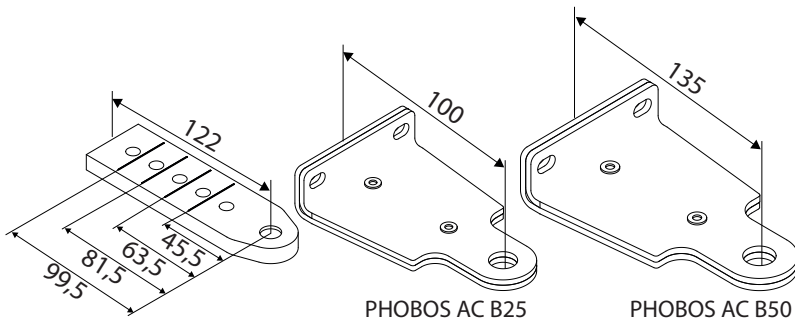
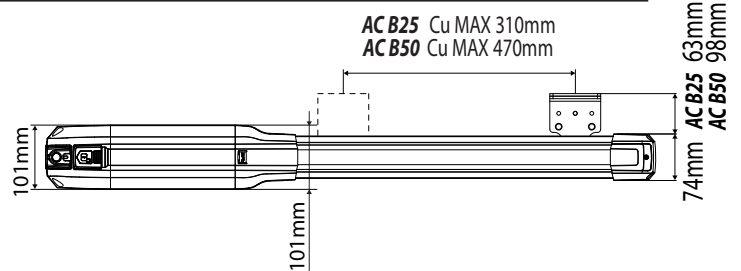


PHOBOS AC B25 PHOBOS AC B50

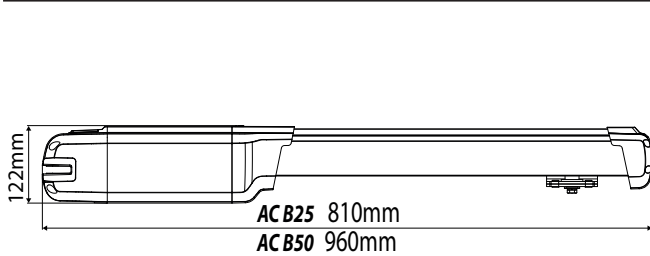


D814419 0ADAO_01 05-12-23

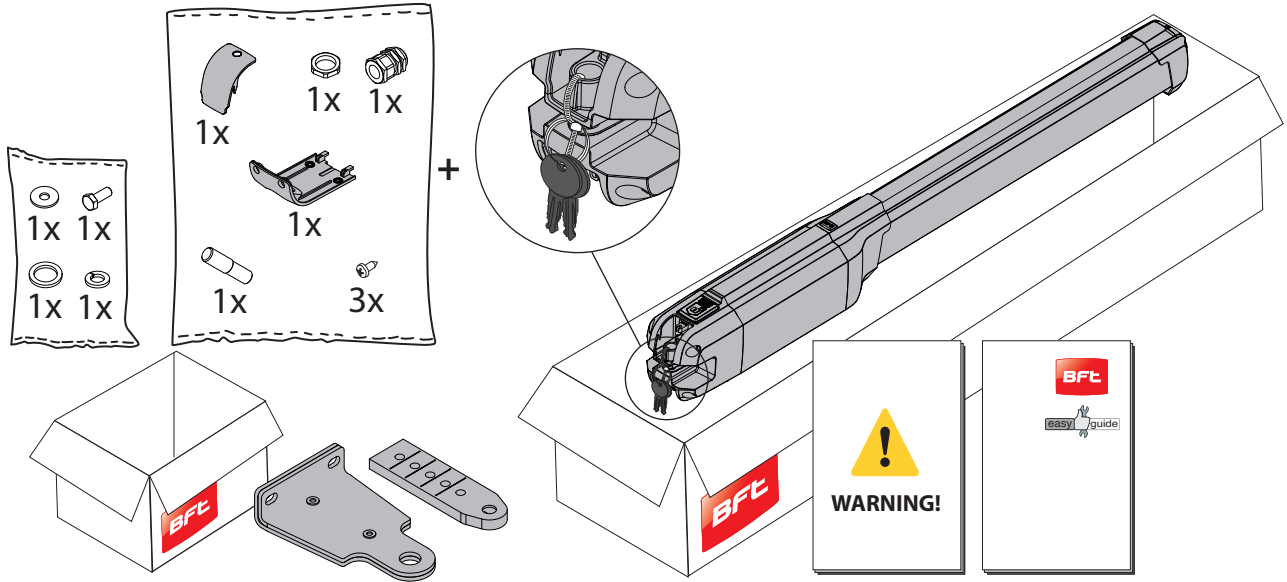

				IP
220-230V~ 50/60HZ 210W	<70dBA	- 20°C	+55°C	44
110-120V~ 50/60HZ 210W				

PHOBOS AC B25 PHOBOS AC B50	Force 2.000 N	
	15 cycles/h (230V)	
	10 cycles/h (120V)	
PHOBOS AC B25	~ 18 s *	
PHOBOS AC B50	~ 22 s *	

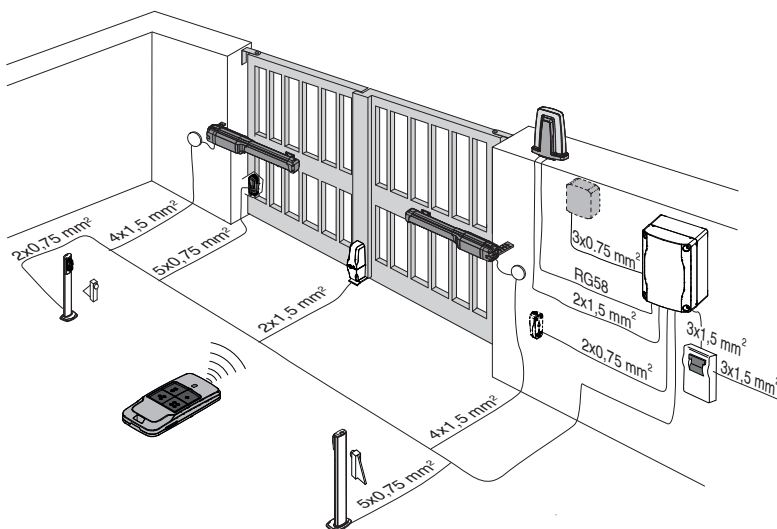


*




IT: Tempo indicativo misurato senza rallentamenti (anta massima e peso massimo).
 EN: Indicative time measured without slowdowns (maximum door and maximum weight).
 FR: Temps indicatif mesuré sans ralentissements (vantaill maximum et poids maximum).
 DE: Gemessene Richtzeit ohne Abbremsen (maximaler Flügel und maximales Gewicht).
 ES: Tiempo orientativo medido sin ralentizaciones (puerta máxima y peso máximo).
 NL: Indicatieve tijd gemeten zonder vertragingen (maximale vleugel en maximaal gewicht).
 PT: Tempo indicativo medido sem desacelerações (porta máxima e peso máximo).
 GR: Ενδεικτικός χρόνος μετρημένος χωρίς επιβραδύνσεις (μέγιστο φύλλο και μέγιστο βάρος).
 PL: Orientacyjny czas mierzony bez spowolnień (maksymalne skrzydło i maksymalna waga).
 RU: Ориентировочное время, измеренное без замедлений (максимальная створка и максимальный вес).
 CZ: Orientační čas měřený bez zpomalení (maximální křídlo a maximální hmotnost).
 TR: Yavaşlama olmadan ölçülen gösterge süresi (maksimum kanat ve maksimum ağırlık).
 HR: Indikativno vrijeme izmjereno bez usporavanja (maksimalni list i maksimalna težina).
 RO: Timp orientativ măsurat fără încetiniri (frunză maximă și greutate maximă).

تم قياس الوقت الإسترشادي بدون تباطؤ (الحد الأقصى للباب والوزن الأقصى)

1

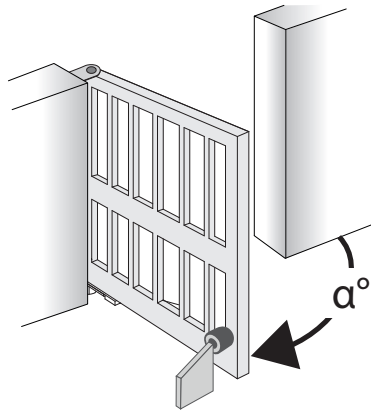

	X max
PHOBOS AC B25	180 mm
PHOBOS AC B50	195 mm

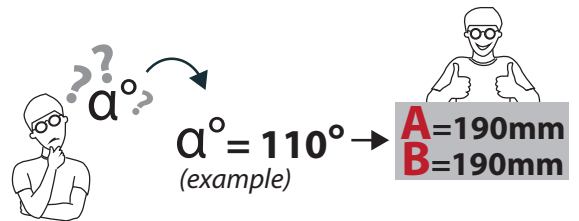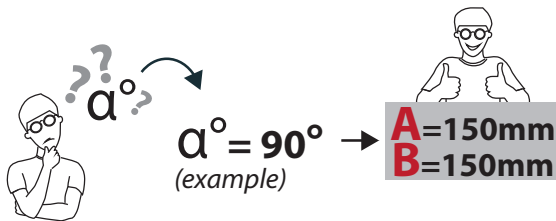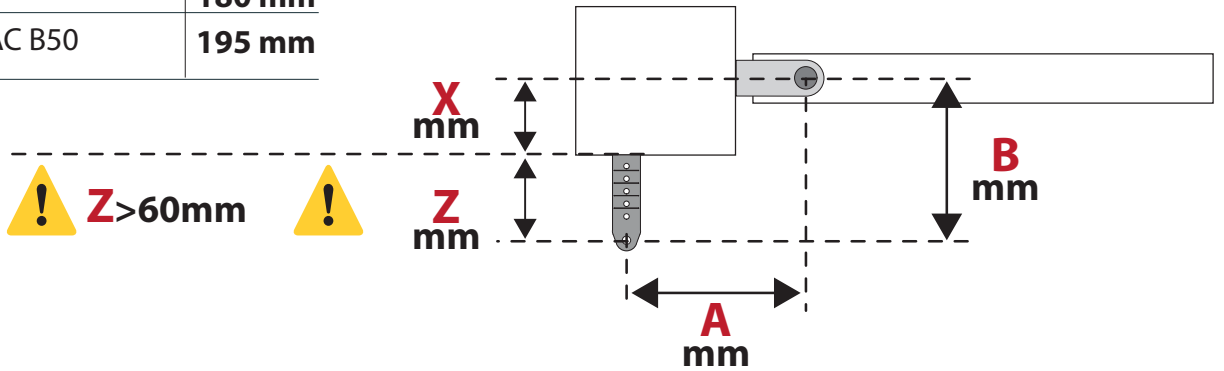

PHOBOS AC B25



A ≈ B 👍

PHOBOS AC B50









		A mm																									
		100	110	120	130	140	150	160	170	180																	
B mm	100	104°	108°	112°	116°	119°	116°	108°	104°	100°																	
	110	103°	107°	111°	114°	115°	108°	103°	100°	96°																	
	120	102°	106°	109°	113°	112°	103°	100°	96°	92°																	
	130	101°	105°	108°	112°	107°	100°	96°	92°																		
	140	100°	104°	107°	110°	101°	97°	92°	88°																		
	150	100°	103°	106°	101°	96°	92°	88°																			
	160	99°	102°	104°	95°	92°	88°																				
	170	99°	102°	98°	93°	88°																					
	180	98°	98°	95°	88°																						
	190	98°	93°	90°																							
	200	93°	90°																								
210	90°																										

		A mm																																				
		100	110	120	130	140	150	160	170	180	190	200	210	220	230																							
B mm	100	104°	109°	113°	116°	120°	123°	125°	128°	130°	124°	122°	122°	122°	122°																							
	110	103°	107°	111°	115°	118°	121°	123°	126°	128°	123°	121°	121°	121°	114°																							
	120	102°	106°	110°	113°	116°	119°	122°	124°	127°	122°	121°	121°	120°	112°																							
	130	101°	105°	109°	112°	115°	118°	120°	123°	125°	122°	120°	120°	116°	110°																							
	140	101°	104°	108°	111°	114°	116°	119°	121°	124°	121°	119°	119°	112°	108°																							
	150	100°	103°	107°	110°	112°	115°	118°	120°	122°	120°	118°	113°	108°	104°																							
	160	100°	103°	106°	109°	111°	114°	116°	119°	121°	120°	117°	109°	106°	102°																							
	170	99°	102°	105°	108°	110°	113°	115°	117°	120°	119°	112°	106°	103°	98°																							
	180	99°	102°	104°	107°	109°	112°	114°	116°	119°	116°	108°	103°	100°	96°																							
	190	98°	101°	104°	106°	108°	111°	113°	115°	116°	110°	104°	100°	98°																								
	200	98°	101°	103°	106°	108°	110°	112°	114°	113°	106°	100°	97°	95°																								
	210	98°	100°	103°	105°	107°	109°	111°	113°	106°	101°	96°	94°																									
	220	97°	100°	102°	104°	106°	108°	110°	108°	101°	97°	94°	91°																									
	230	97°	99°	102°	104°	106°	107°	109°	102°	97°	94°	91°																										
	240	97°	99°	101°	103°	105°	106°	105°	98°	94°	91°																											
	250	96°	98°	101°	103°	105°	103°	96°	93°	91°																												
	260	96°	98°	100°	102°	104°	98°	92°	90°																													
	270	96°	97°	100°	102°	94°	92°																															
	280	95°	97°	99°	93°	88°																																
	290	95°	97°	96°	88°																																	
	300	95°	97°	89°																																		


2

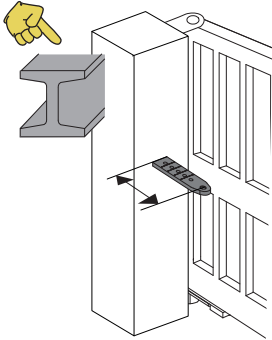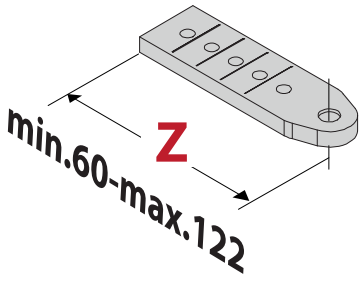


Z < 122mm

 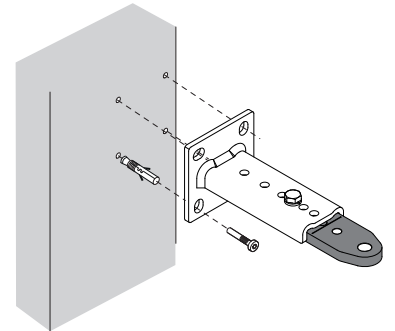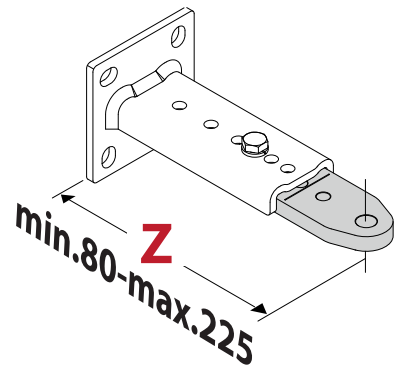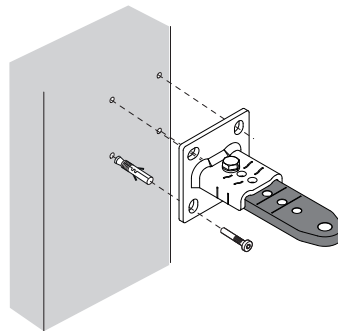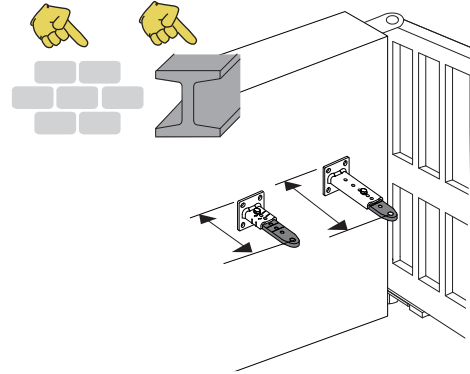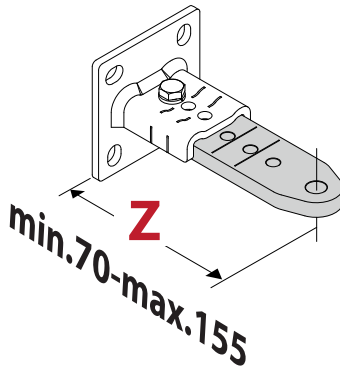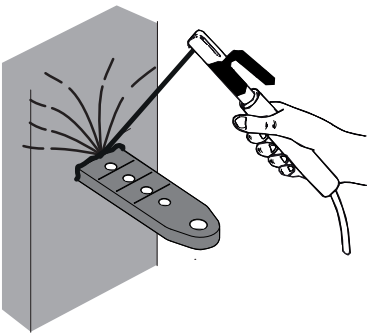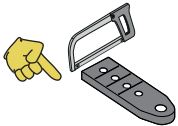



3

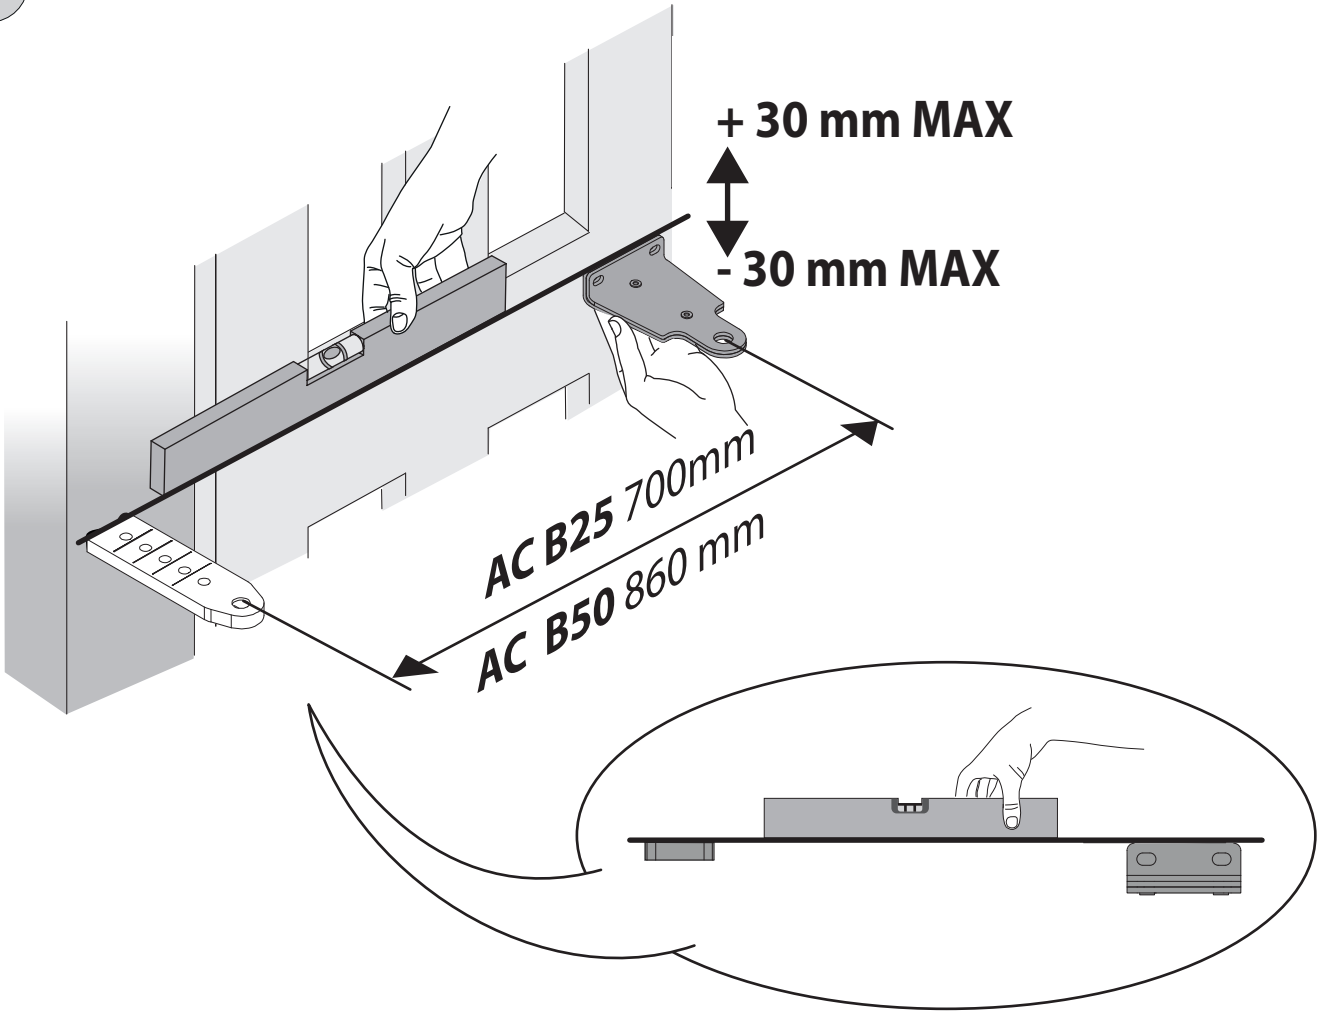


4

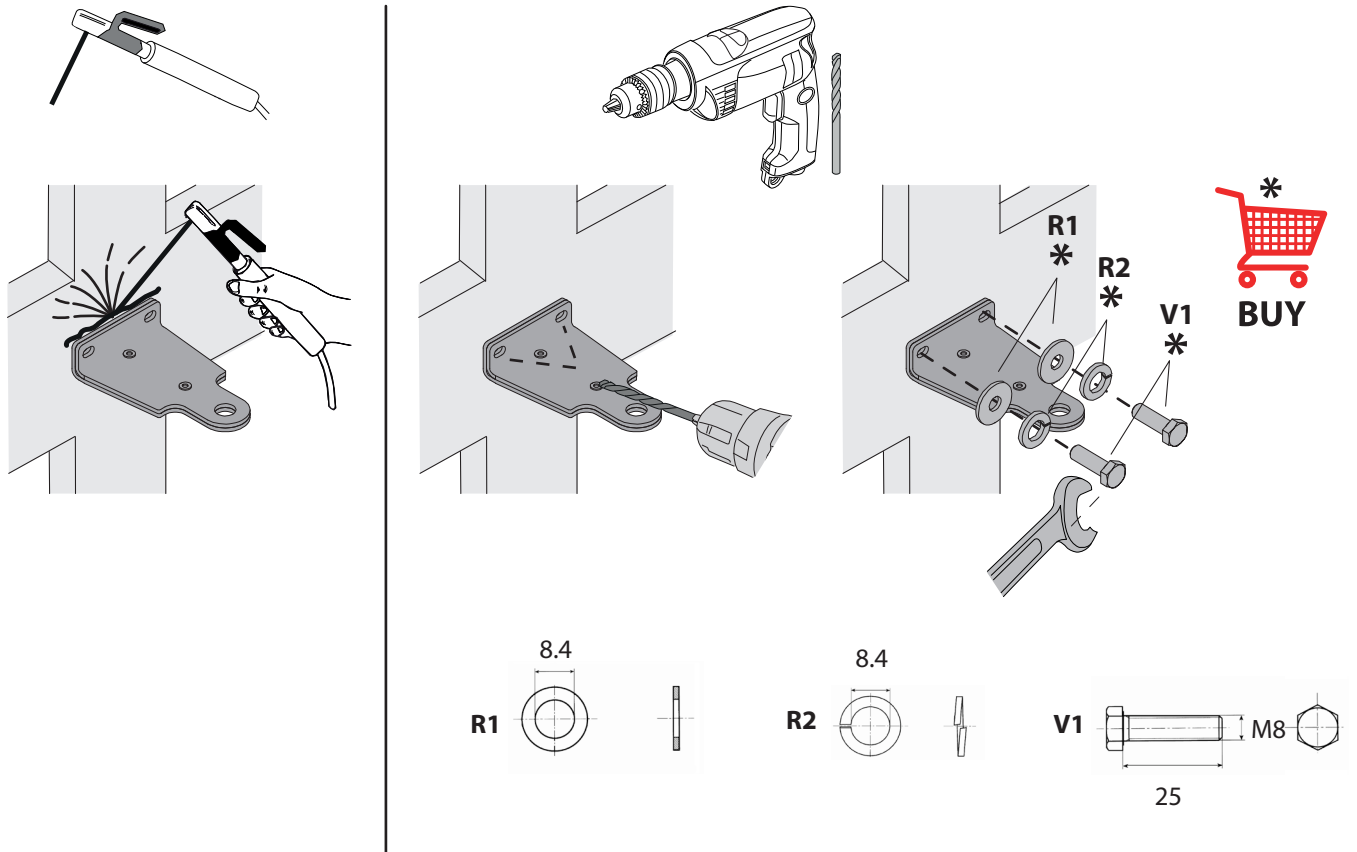


5

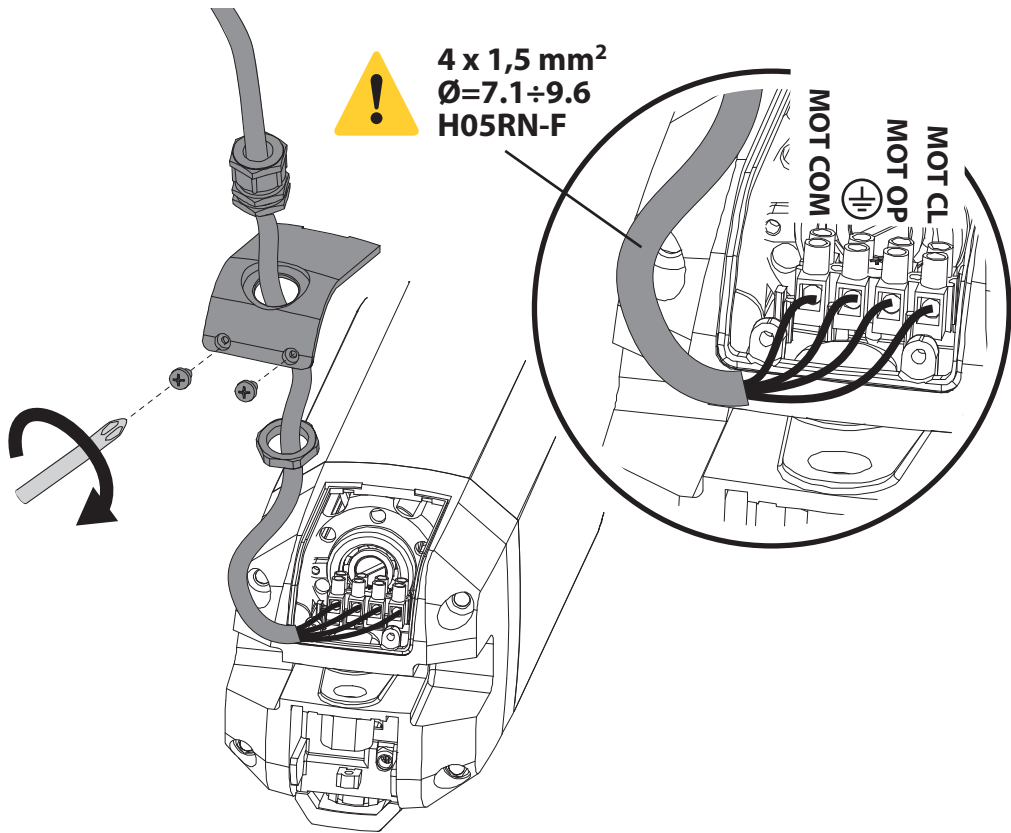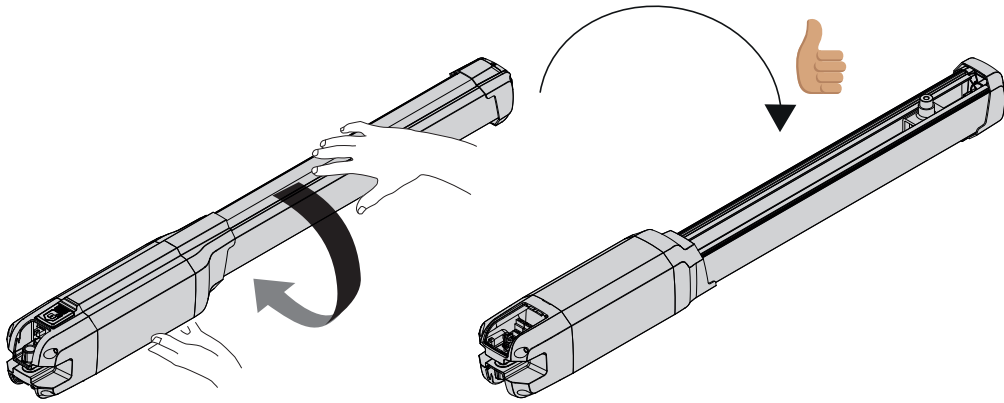


6

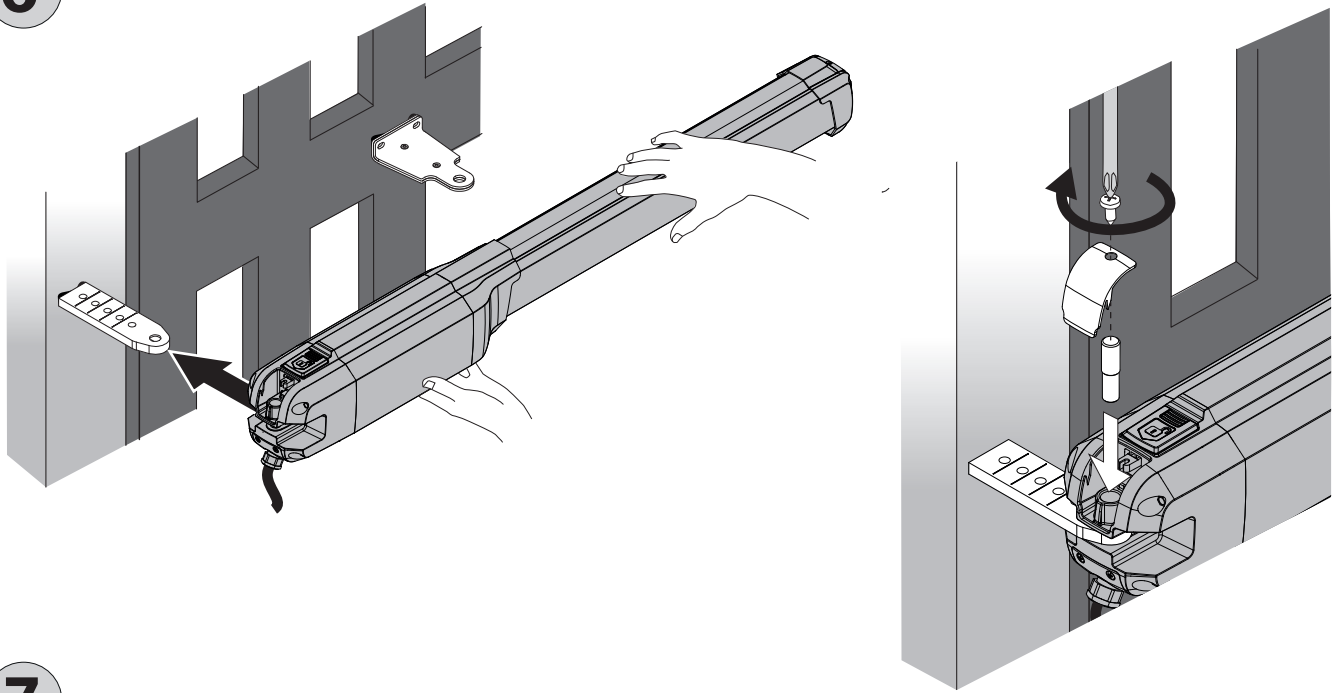

7

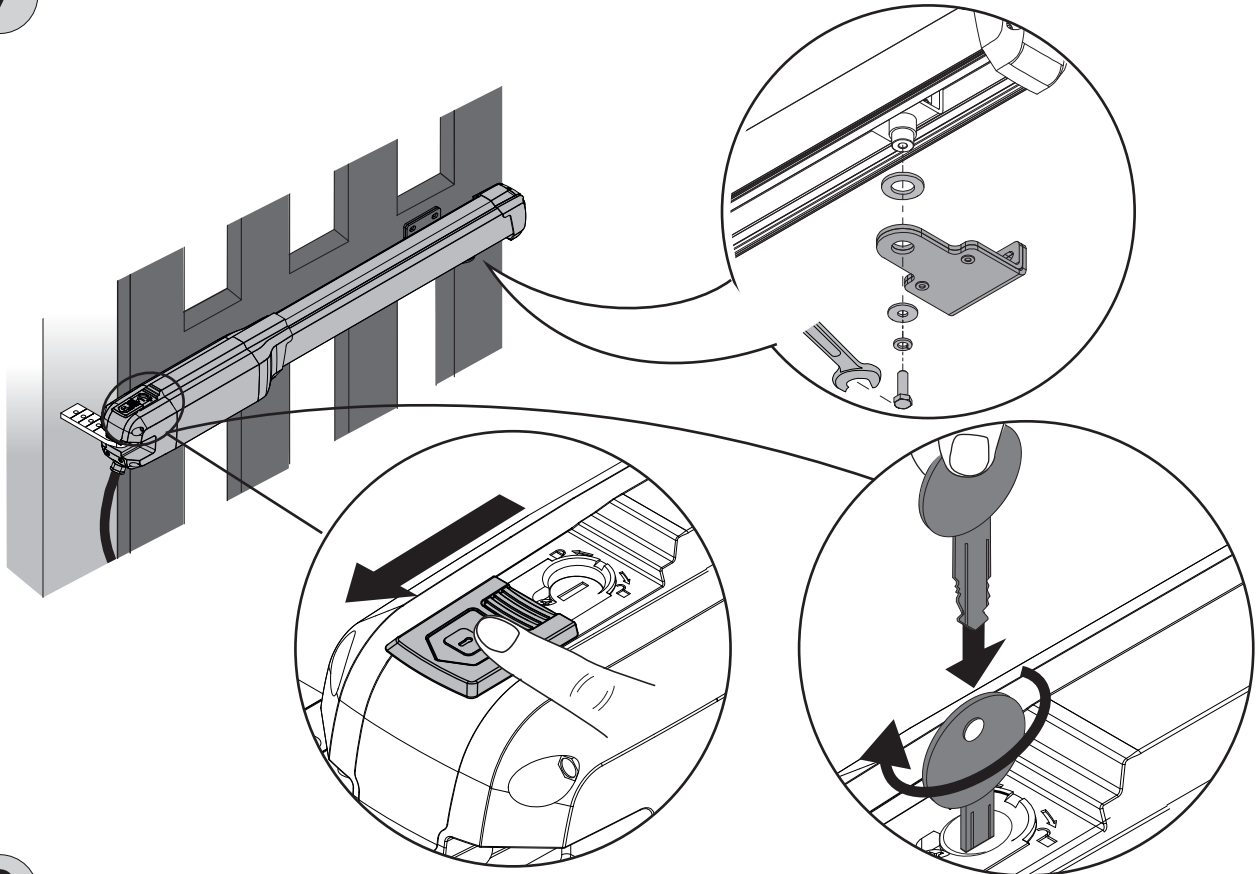


8

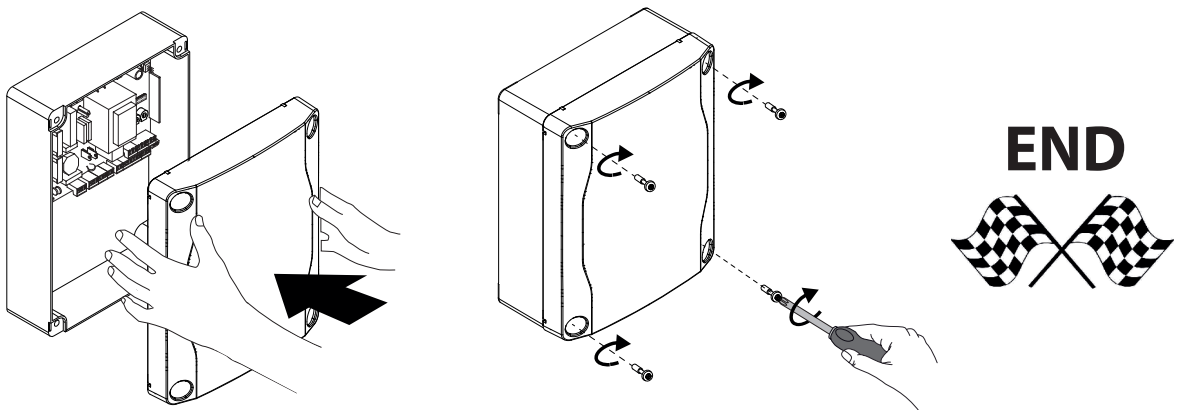




IT	MANOVRA MANUALE	DE	MANUELLE ÖFFNUNG	PL	OTWIERANIE RĘCZNE	HR	RUČNO OTVARANJE
EN	MANUAL OPENING	NL	HANDMATIGE OPENING	RU	РУЧНОЕ ОТКРЫТИЕ	RO	DESCHIDERE MANUALĂ
FR	OUVERTURE MANUELLE	PT	ABERTURA MANUAL	CS	MANUÁLNÍ OTEVÍRÁNÍ		فتح يدوي
ES	APERTURA MANUAL	EL	XEIPOKINHTO ANOIGMA	TR	MANUEL AÇMA		AR

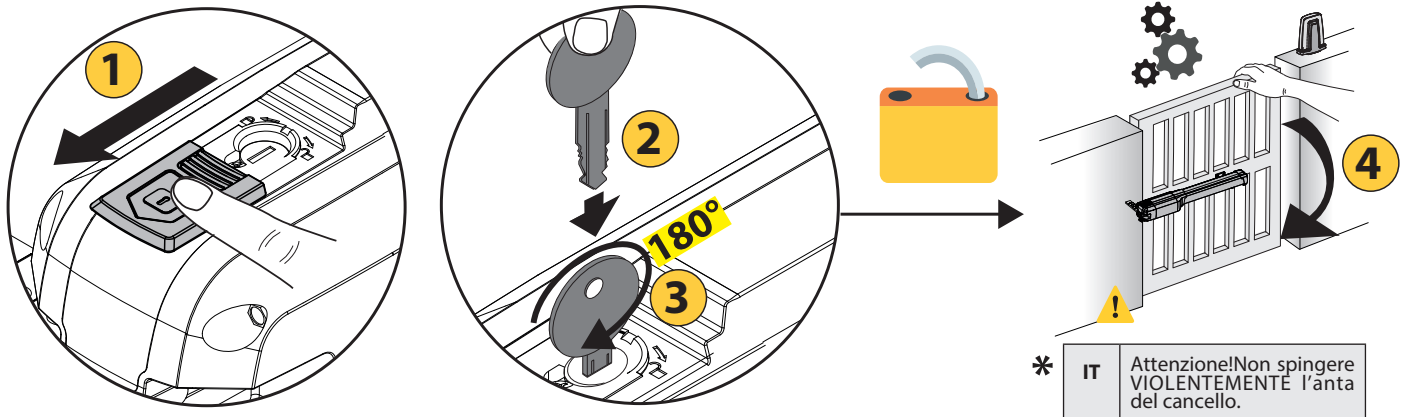

* IT Attenzione! Non spingere VIOLENTEMENTE l'anta del cancello.

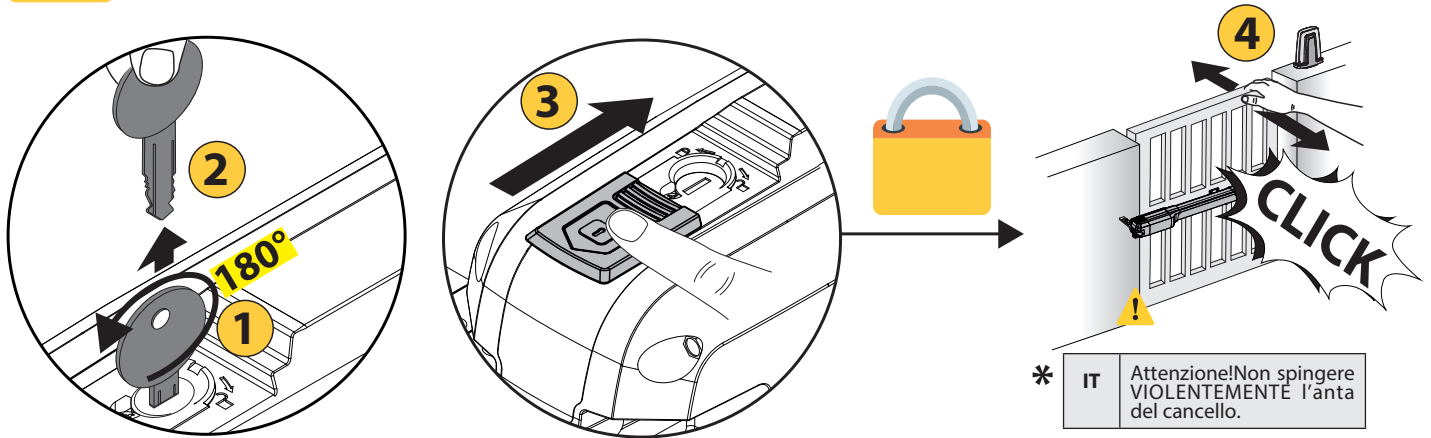

* IT Attenzione! Non spingere VIOLENTEMENTE l'anta del cancello.




IT	Attenzione! Non spingere VIOLENTEMENTE l'anta del cancello.
EN	Warning! Do not push the gate WITH EXCESSIVE FORCE
FR	Attention! Ne poussez pas VIOLEMMENT le vantail du portail.
ES	¡Atención! No empuje CON VIOLENCIA la hoja de la puerta.
DE	Achtung! Schieben Sie den Torflügel nicht MIT GEWALT an.


NL	Let op! Duw niet MET GEWELD tegen de deur van het hek.
PT	Atenção! Não empurrar COM FORÇA a folha do portão.
EL	Προσοχή! Μην απρώχνετε ΜΕ ΜΕΓΑΛΗ ΔΥΝΑΜΗ το φύλλο της πύλης.
PL	Uwaga! Nie należy GWAŁTOWNIE popychać skrzydła bramy.
RU	Внимание! Не толкайте СЛИШКОМ СИЛЬНО створку ворот.

CS	Pozor! Na křídlo brány netlačte PŘÍLIŠNOU SILOU.
TR	Dikkat! Kapının kanadını ŞİDDETLİ bir şekilde itmeyin.
HR	Nemojte gurati vrata uz primjenu PREKOMJERNE SILE!
RO	Nu împingeți bariera CU FORȚĂ EXCESIVĂ.
AR	لا تدفع البوابة بقوة زائدة

PHOBOS AC B25

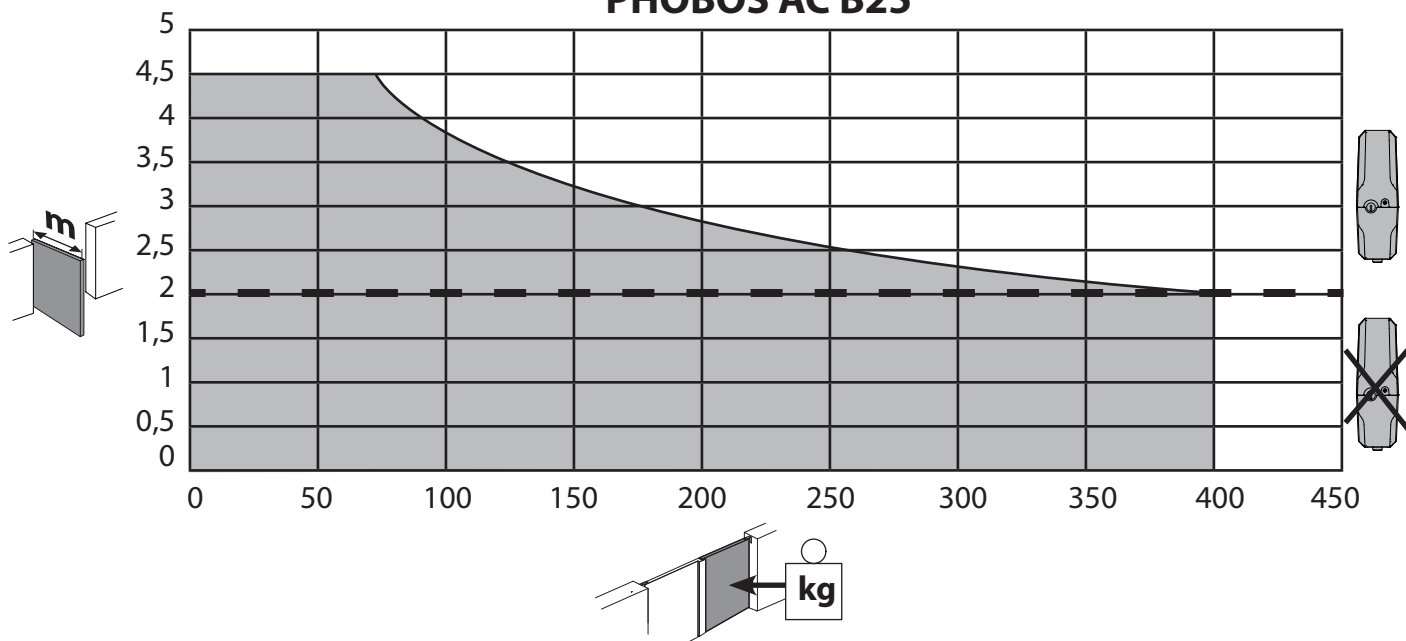

PHOBOS AC B50

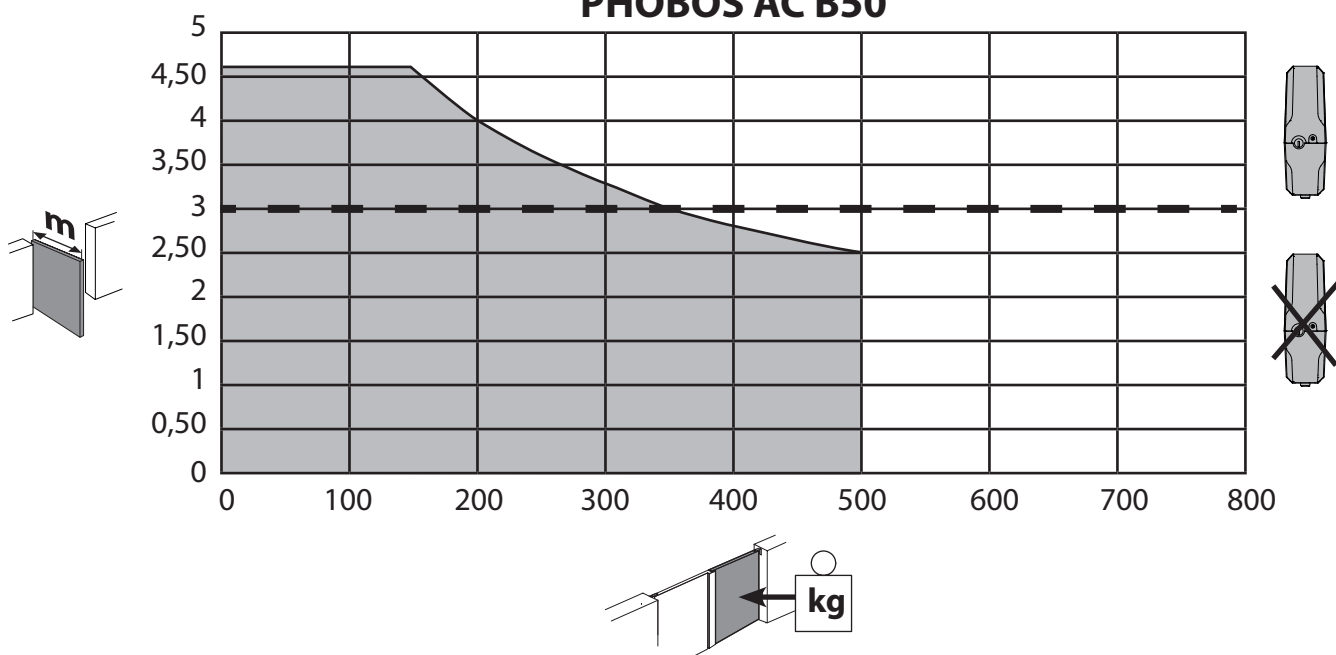

AZIENDA CON
SISTEMA DI GESTIONE
CERTIFICATO DA DNV GL
= ISO 9001 =
= ISO 14001 =



www.bft-automation.com

BFT Spa

Via Lago di Vico, 44 ITALY
36015 Schio (VI)
T +39 0445 69 65 11
F +39 0445 69 65 22

SPAIN
BFT GROUP ITALIBERICA DE
AUTOMATISMOS SL
Camí de Can Bassa, 6, 08401
Granollers, Barcelona, Spagna

FRANCE
AUTOMATISMES BFT FRANCE SAS
50 rue Jean Zay
69800 Saint-Priest, Francia

GERMANY
BFT ANTRIEBSSYSTEME GMBH
Faber-Castell-Straße 29, 90522
Oberasbach, Germania

UNITED KINGDOM
BFT AUTOMATION UK LTD
Unit C2-C3 The Embankment Business
Park, Vale Road Heaton Mersey Stockport
Cheshire SK4 3GL United Kingdom

BFT AUTOMATION (SOUTH) LTD
Enterprise House Murdock Road, Dorcan,
Swindon, England, SN3 5HY

PORTUGAL
BFT PORTUGAL SA
Urb. Pedrulha lote 9 - Apartado 8123,
3025-248 Coimbra Portugal

POLAND
BFT POLSKA SP ZOO
Marecka 49, 05-220 Zielonka, Polonia

IRELAND
BFT AUTOMATION IRELAND
Unit D3 City Link Business Park, Old Naas
Road, Dublin

CROATIA
BFT ADRIA DOO
Obrovac 39, 51218, Dražice, Croazia

CZECH REPUBLIC
BFT CZ SRO
Ustecka 533/9, 184 00 Praha 8,
Czech

TURKEY
BFT OTOMASYON KAPI
Şerifali Mahallesi, no, 34775
Ümraniye/İstanbul, Turchia

U.S.A.
BFT AMERICAS INC.
1200 S.W. 35th Avenue Suite B Boynton
Beach FL 33426

AUSTRALIA
BFT AUTOMATION AUSTRALIA PTY
29 Bentley St, Wetherill Park NSW
2164, Australia

EMIRATES
BFT MIDDLEEAST FZCO
FZS2 AA01 -PO BOX 262200, Jebel Ali Free
Zone South Zone 2, Dubai - United Arab

NEW ZEALAND
BFT AUTOMATION NEW ZEALAND
224/A Bush Road, Rosedale,
Auckland, New Zealand