

Flush 1D Relay

This module is used for switching on or off the electrical device (e.g. light or fan). The module can be controlled either through wireless network or through the wall switch. The module is designed to be mounted inside a "flush mounting box". hidden behind a traditional wall switch.

Module supports connection of digital temperature sensor. It is designed to act as repeater in order to improve range and stability of wireless network.

Supported switches

Module supports mono-stable switches (push button) and bi-stable switches. The module is factory set to operate with bi-stable switches.

Installation

- To prevent electrical shock and/or equipment damage, disconnect electrical power at the main fuse or circuit breaker before installation or any servicing.
- Make sure, that no voltage is present in the L installation
- Prevent the disconnecting device from being switched on accidentally.
- Connect the module according to electrical diagram.
- Locate the antenna far from metal elements (as far as possible).
- Do not shorten the antenna.

Danger of electrocution!

 
- · Module installation requires a great degree of and licensed electrician.
- Even when the module is turned off, voltage may be present on its terminals.

Note!


Do not connect the module to loads exceeding recommended values. Connect the module only in accordance to the below diagrams. Improper connections may be dangerous.

Electrical installation must be protected by directly associated over current protection fuse 10 A, gG or Time lag T, rated breaking capacity 1500 A (ESKA 522.727) must be used according to wiring diagram to achieve appropriate overload protection of the module.

Electrical diagram 230VAC




Option for different load power supply - DPLS:

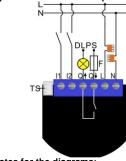


Notes for the diagrams:

- Neutral lead
- Live lead
- Qŧ Input for electrical device power supply
- Qŧ Output for electrical device
- 12 Input for switch /push button or sensor
- 11 Input for switch /push button
- TS Terminal for digital temperature sensor (only for Flush 1D Relay module compatible digital temperature sensor, which must be ordered separately).

 Wago 221-413 splicing connectors for L and N connection must be used.



 Option for different load power supply - DPLS:



Notes for the diagrams:

Ν + VDC

- L - VDC
- Qţ Input for electrical device power supply
- Qŧ Output for electrical device
- 12 Input for switch /push button or sensor
- 11 Input for switch /push button
- TS Terminal for digital temperature sensor (only for Flush 1D Relay module compatible digital temperature sensor, which must be ordered separately).

Note!

Output contact is voltage free (dry contact), so also loads with different power supply can be connected to the module.



Service button (used to add or remove module from the gateway in case of 24 V SELV power supply).

WARNING: Service button S must NOT be used when module is connected to 110-230 V power supply.

Durability of the module depends on applied load. For resistive load (light bulbs, etc.) and 10 A current consumption of each individual electrical device, the durability exceeds 100.000 switches of each individual electrical device.

Package contents

• Flush 1D Relay module

Inclusion (Adding to Z-wave network)

- Connect module to power supply (with temperature sensor connected purchased).
- auto-inclusion (works for about 5 seconds after connected to power supply) or

- press push button I1 three times within 3 s (3 times change switch state within 3 seconds)
- press service button S (only applicable for 24 V SELV supply voltage) for more than 2 second.

NOTE1: For auto-inclusion procedure, first set main controller into inclusion mode and then connect module to power supply.

NOTE2: When connecting temperature sensor to module that has already been included, you have to exclude module first. Switch off power supply, connect the sensor and re-include the module.

Module Exclusion/Reset (Removing from Z-Wave network)

- Connect module to power supply
- bring module within maximum 1 meter (3 feet) of the main controller,
- enable add/remove mode on main controller
- press push button I1 five times within 3 s (5 times change switch state within 3 seconds) in the first 60 seconds after the module is connected to the power supply or
- press service button S (only applicable for 24 V SELV supply voltage) for more than 6

By this function all parameters of the module are set to default values and own ID is deleted

If push button I1 is pressed three times within 3s (or service button S is pressed more than 2 and less than 6 seconds) module is excluded, but configuration parameters are not set to default values.

NOTE: If the module is included with parameter 100 with values different to default and module reset is done, wait at least 30s before next inclusion.

Associations

Association enables Flush 1D Relay module to transfer commands inside wireless network directly (without gateway) to other zwave modules. Associated Groups:

Root device:

Group 1: Lifeline group (reserved for communication with the main controller), 1 node allowed.

Group 2: basic on/off (triggered at change of the output state and reflecting its state) up to 16

Group 3: basic on/off (triggered at change of the input I2 state and reflecting its state) up to 16

Group 4: Binary Sensor Report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.

Group 5: Notification Report (triggered at change of the input I2 state and reflecting its state) up to

Group 6: multilevel sensor report (triggered at change of temperature sensor) up to 16 nodes.

Endpoint 1:

Group 1: Lifeline group, 0 nodes allowed.

Group 2: basic on/off (triggered at change of the output state and reflecting its state) up to 16

Endpoint 2:

Group 1: Lifeline group, 0 nodes allowed.

Group 2: basic on/off (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.

Group 3: Binary Sensor Report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.

Group 4: Notification Report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes

End point 3:

Group 1: Lifeline group, 0 nodes allowed.

Group 2: multilevel sensor report (triggered at change of temperature sensor) up to 16 nodes.

Configuration parameters

Parameter no. 1 - Input 1 switch type

Available configuration parameters (data type is 1 Byte DEC):

- default value 1
- 0 mono-stable switch type (push button)
- 1 bi-stable switch type

Parameter no. 2 - Input 2 contact type

Available configuration parameters (data type is 1 Byte DEC):

- default value 0
- 0 NO (normally open) input type
- 1 NC (normally close) input type

Parameter no. 10 - Activate / deactivate functions ALL ON/ALL OFF

Available configuration parameters (data type is 2 Byte DEC):

- default value 255
- 255 ALL ON active. ALL OFF active
- 0 ALL ON is not active ALL OFF is not active 1 - ALL ON is not active ALL OFF active
- 2 ALL ON active ALL OFF is not active

Flush 1D Relay module responds to commands ALL ON / ALL OFF that may be sent by the main controller or by other controller belonging to the system.

Parameter no. 11 - Automatic turning off output after set time

When relay is ON it goes automatically OFF after

time defined by this parameter. Timer is reset to zero each time the module receive ON command regardless from where it comes (push button. • associated module, controller,..).

Available configuration parameters (data type is 2 Parameter no. 100 - Disable Endpoint I2 or Byte DEC):

- default value 0
- 0 Auto OFF disabled
- 1 32535 = 1second (0.01 s) 32535 seconds (325.35 s) Auto OFF enabled with define time, step is 1 s or 10 ms according to parameter nr. 15.

after set time

time defined by this parameter. Timer is reset to SPECIFIC_TYPE_NOTIFICATION_SENSOR zero each time the module receive OFF command regardless from where it comes (push button, associated module, controller, etc.). Available configuration parameters (data type is 2 Byte • DEC):

- default value 0
- 0 Auto ON disabled
- 1 32535 = 1 second (0.01 s) 32536 seconds (325.35 s) Auto ON enabled with define time, step is 1 s or 10 ms according to • parameter nr. 15.

Parameter no. 15 - Automatic turning off / on • seconds or milliseconds selection

Available configuration parameters (data type is 1 • Byte DEC):

- default value 0
- 0 seconds selected
- 1 milliseconds selected

NOTE: This parameter is valid for both, turning on and turning off parameters.

Parameter no. 30 - Saving the state of the relay after a power failure

Available configuration parameters (data type is 1 Byte DEC):

- default value 0
- 0 Flush 1D Relay module saves its state before power failure (it returns to the last position saved before a power failure)
- 1 Flush 1D Relay module does not save the state after a power failure, it returns to "off" position.

Parameter no. 63 - Output Switch selection

Set value means the type of the device that is connected to the output. The device type can be normally open (NO) or normally close (NC). Available configuration parameters (data type is 1 Byte DEC):

default value 0

- 0 When system is turned off the output is 0 V
- 1 When system is turned off the output is 230 V or 24 V (NO)

select Notification Type and Event

Enabling I2 means that Endpoint (I2) will be present on UI. Disabling it will result in hiding the endpoint according to the parameter set value. Additionally, a Notification Type and Event can be selected for the endpoint. Available configuration parameters (data type is 1 Byte DEC):

- notification sensor (1 - 6): When relay is OFF it goes automatically ON after GENERIC_TYPE_SENSOR_NOTIFICATION,

- default value 0
- 1 Home Security; Motion Detection, unknown location
- 2 Carbon Monoxide: Carbon Monoxide detected, unknown location.
- 3 Carbon Dioxide; Carbon Dioxide detected, unknown location.
- 4 Water Alarm; Water Leak detected, unknown location.
- 5 Heat Alarm: Overheat detected, unknown
- 6 Smoke Alarm: Smoke detected, unknown
- 0 Endpoint, I2 disabled
- sensor binary (9):

GENERIC TYPE SENSOR BINARY, SPECIFIC TYPE NOT USED

• 9 - Sensor binary

NOTE 1: After parameter change, first exclude module (without setting parameters to default value) then wait at least 30 s and then re include

NOTE 2: When the parameter is set to value 9 the notifications are send for Home Security.

Parameter no. 110 - Temperature sensor offset settings

Set value is added or subtracted to actual measured value by sensor. Available config. parameters (data type is 2 Byte DEC):

- default value 32536
- 32536 offset is 0.0 °C
- From 1 to 100 value from 0.1 °C to 10.0 °C is added to actual measured temperature.
- From 1001 to 1100 value from -0.1 °C to -10.0 °C is subtract. to actual measured temp.

Parameter no. 120 - Temperature sensor reporting

If digital temperature sensor is connected, module reports measured temperature on temperature change defined by this parameter.

Available configuration parameters (data type is 1 Supported Command Classes: Byte DEC):

- default value 5 = 0.5 °C
- 0 Reporting disabled
- 1- 127 = 0.1 °C 12.7 °C, step is 0.1 °C

Technical Specifications

Power supply	110 - 230 VAC ±10 %
	50/60 Hz, (24-30
	VDC)
Rated load current of AC	1 X 10 A / 230 VAC
output (resistive load)*	
Rated load current of DC	1 X 10 A / 30 VDC
output (resistive load)	
Output circuit power of	2300 W (230 VAC)
AC output (resistive	
load)	
Output circuit power of	240 W (24 VDC)
DC output (resistive	
load)	
Digital temperature	-50 ~ +125 °C
sensor range (sensor	
must be ordered	
separately)	
Operation temperature	-10 ~ +40 °C
Distance	up to 30 m indoors
	(depending on
	building materials)
Dimensions (WxHxD)	41.8 mm x 36.8 mm x
(package)	15.4 mm (79 mm x 52
	mm x 22 mm)
Weight (Brutto with	28 g (34 g)
package)	
Electricity consumption	0.4 W
For installation in boxes	$\emptyset \ge 60 \text{ mm or } 2M$,
	depth≥ 60 mm
Switching	Relay

to the value of cos φ and if necessary apply load lower than the rated load. Max current for cos φ =0,4 is 3A at 250VAC, 3A at 24VDC L/R=7ms.

Supported loads:

- M Electric motor
- Convent. incandescent and halogen lights
- LED and CFL bulb, low voltage halogen bulbs with electronic transformer
- Low voltage halogen bulbs with conventional transformer

Device Class:

ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_AL GENERIC TYPE SWITCH BINARY

SPECIFIC TYPE POWER SWITCH BINARY

COMMAND CLASS ZWAVEPLUS INFO

COMMAND CLASS VERSION V2 COMMAND CLASS MANUFACTURER SPECIFIC COMMAND CLASS DEVICE RESET LOCALLY COMMAND CLASS POWERLEVEL

COMMAND CLASS BASIC

COMMAND CLASS SENSOR BINARY

COMMAND CLASS NOTIFICATION V5

COMMAND CLASS SWITCH ALL

COMMAND_CLASS_SWITCH_BINARY

COMMAND CLASS SENSOR MULTILEVEL V7

COMMAND CLASS MULTI CHANNEL V4

COMMAND_CLASS_ASSOCIATION_V2 COMMAND CLASS MULTI CHANNEL ASSOCIATION

V3

COMMAND_CLASS_ASSOCIATION_GRP_INFO_V2 COMMAND CLASS CONFIGURATION

COMMAND CLASS MARK

COMMAND CLASS BASIC

Endpoint 1

COMMAND CLASS ZWAVEPLUS INFO

COMMAND CLASS VERSION V2

COMMAND CLASS BASIC

COMMAND CLASS SWITCH ALL

COMMAND CLASS SWITCH BINARY

COMMAND CLASS ASSOCIATION V2 COMMAND CLASS MULTI CHANNEL ASSOCIATION

COMMAND CLASS ASSOCIATION GRP INFO V2 COMMAND CLASS MARK

COMMAND CLASS BASIC

Endpoint 2 (I2):

Device Class:

ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_AL WAYS_ON

GENERIC TYPE SENSOR NOTIFICATION SPECIFIC TYPE NOTIFICATION SENSOR

Command Classes:

COMMAND CLASS ZWAVEPLUS INFO

COMMAND_CLASS_VERSION_V2

COMMAND CLASS SENSOR BINARY

COMMAND CLASS BASIC

COMMAND CLASS NOTIFICATION V5

COMMAND_CLASS_ASSOCIATION_V2

COMMAND CLASS MULTI CHANNEL ASSOCIATION

COMMAND CLASS ASSOCIATION GRP INFO V2

COMMAND CLASS MARK

COMMAND CLASS BASIC

Endpoint 3:

Device Class:

ZWAVEPLUS INFO REPORT ROLE TYPE SLAVE AL WAYS 0N

GENERIC TYPE SENSOR MULTILEVEL

COMMAND CLASS ASSOCIATION V2

SPECIFIC TYPE ROUTING SENSOR MULTILEVEL

Command Classes:

COMMAND CLASS ZWAVEPLUS INFO V2 COMMAND CLASS VERSION V2

COMMAND CLASS MULTI CHANNEL ASSOCIATION

COMMAND CLASS ASSOCIATION GRP INFO V2 COMMAND CLASS SENSOR MULTILEVEL V7

NOTE: The above list is valid for the product with a temperature sensor connected to TS terminal. In case the sensor isn't connected then following command class isn't supported:

COMMAND_CLASS_SENSOR_MULTILEVEL_V7

Important disclaimer

Wireless communication is inherently not always 100% reliable, and as such, this product should not be used in situations in which life and/or valuables are solely dependent on its function.

Warning!

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new once, the retailer is legally obligated to take back your old appliance for disposal at least for free of chargeThis user manual is subject to change and improvement without notice.

NOTE: User manual is valid for module with SW version S4 (SW version is part of P/N)! Example: P/N: ZMNHNEx Hx\$4Px





Goap d.o.o. Nova Gorica Ulica Klementa Juga 007 5250 Solkan

Slovenia

+386 5 335 95 00 +386 5 300 61 43 Fax:

Web: www.goap.eu Date: 12.04.2016

Document: Flush 1D Relay user

manual_V1.4_eng