



FULL MANUAL

دليل كامل



U-LINK
2.0







U-LINK




D814384 0ADA0_01 31-05-23

ZARA BT A80



 24 V	 - 20°C	 +60°C	IP
200W			55

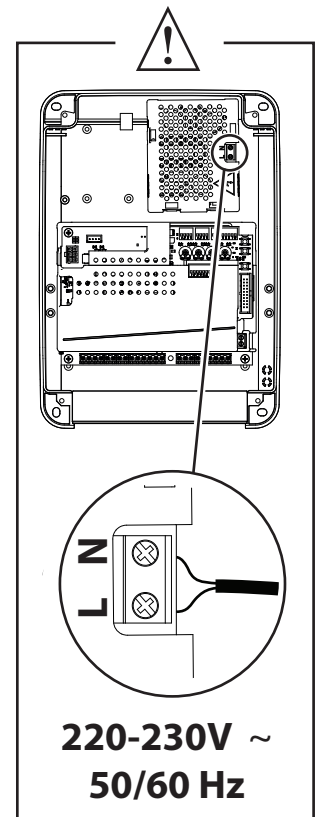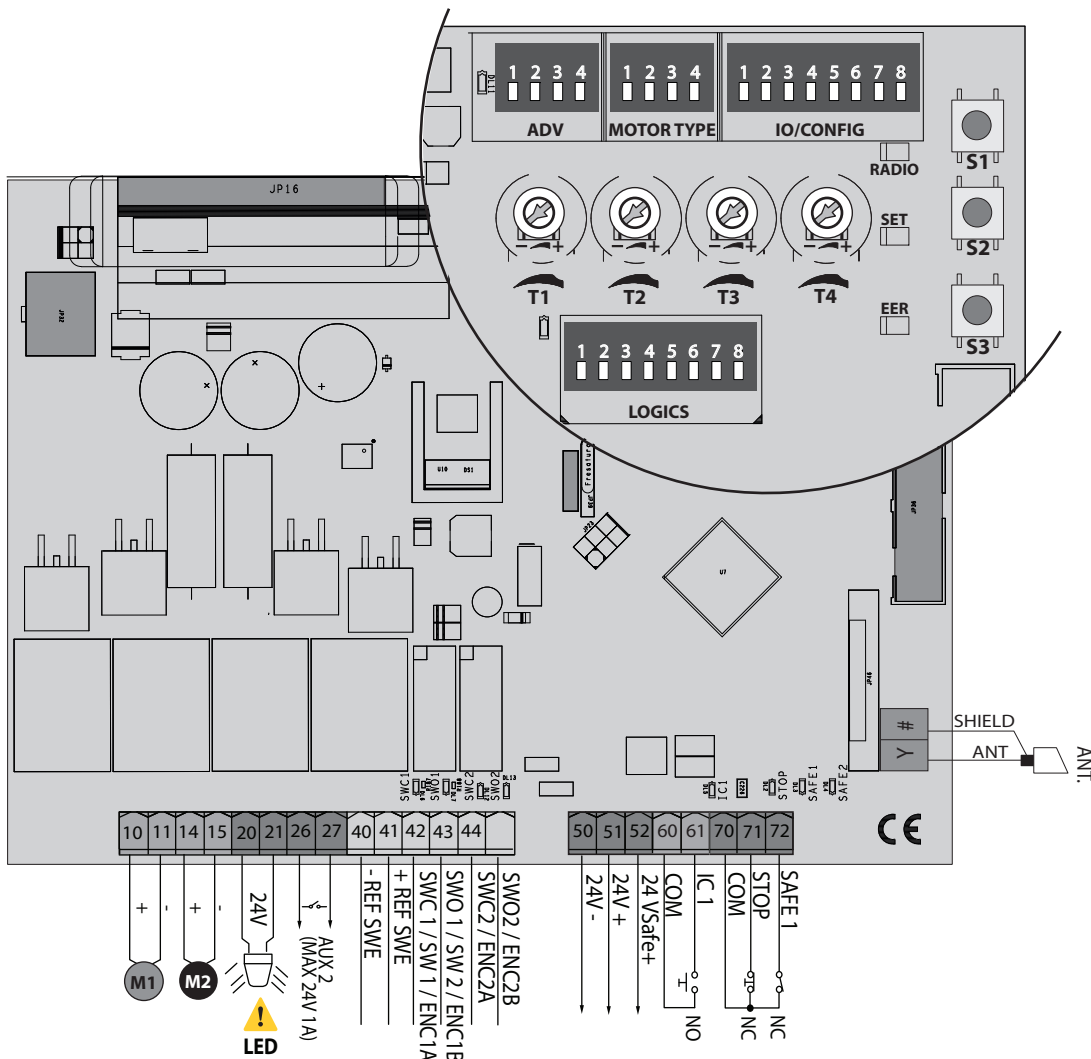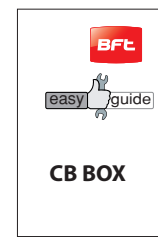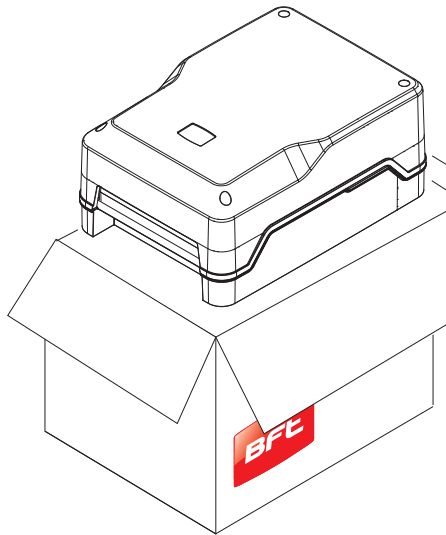



220-230V ~
50/60 Hz

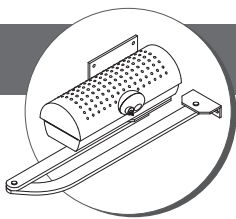


IGEA BT

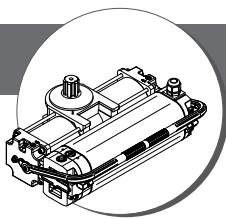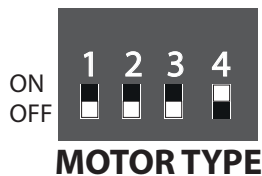





SUB BT

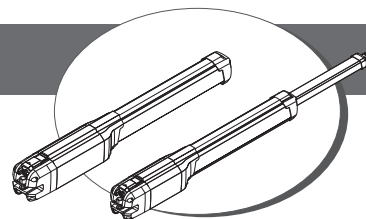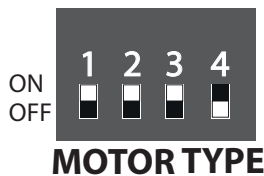





PHOBOS BT A - PHOBOS BT B
KUSTOS BT A - KUSTOS BT B

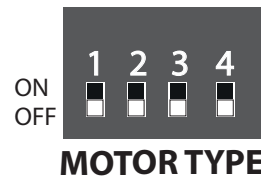





PHOBOS VELOCE BT B35

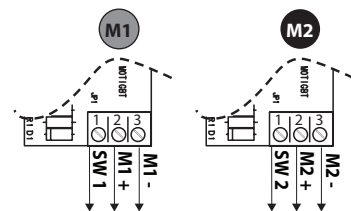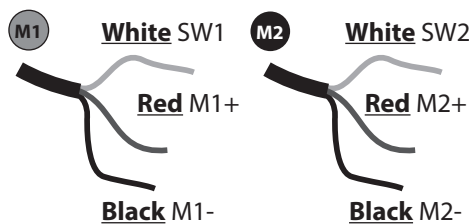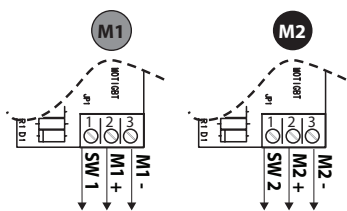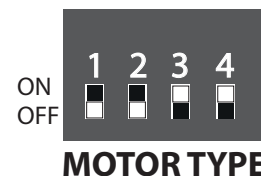


White Bianco - Blanc - Weiß - Blanco - Wit - Brancov
- Λευκή - biały - белый - bílá - Ak - Croato - Alb - أبيض
Red Rosso - Roug - Rot - Rojo - Rood - Vermelho
- κόκκινο - czerwony - красный - červený - kırmızı
- Croato - Roşu - أحمر
Black Nero - Noir - Nero - Negro - Zwart - Preto
- μαύρο - czarny - черный - černý - siyah - Croato -
Negru - أسود


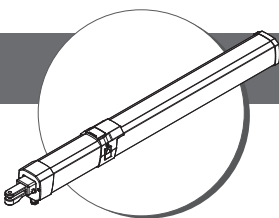
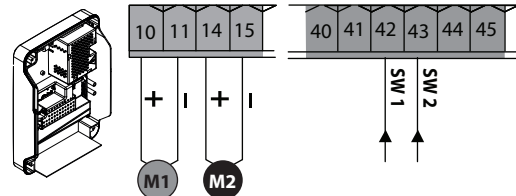
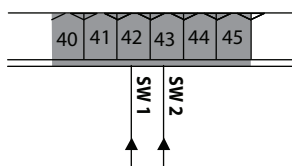
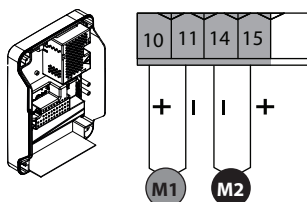


GIUNO ULTRA

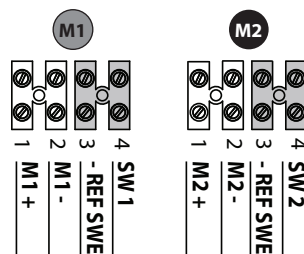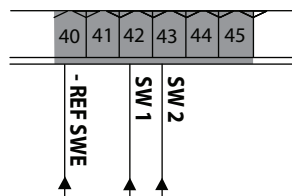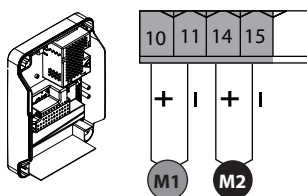
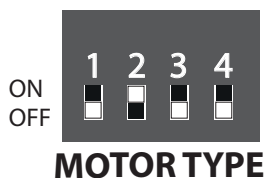


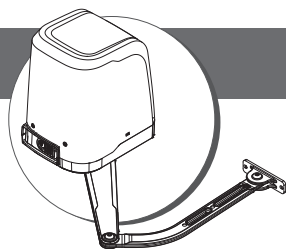







VIRGO SMART BT A SLAVE

 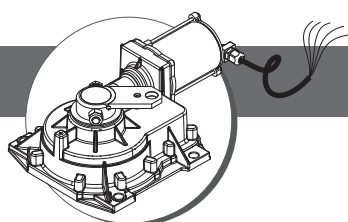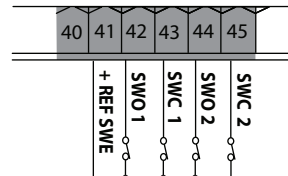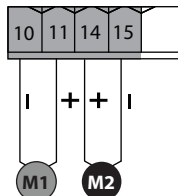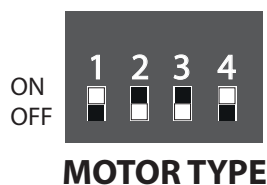

ELI BT A40

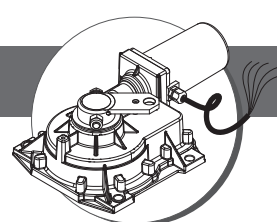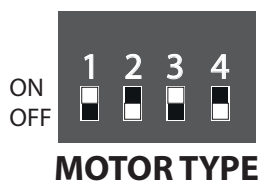

ELI BT A35V

 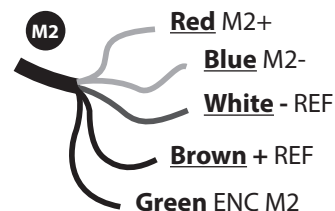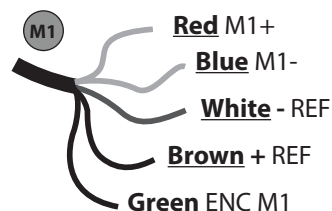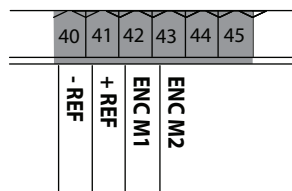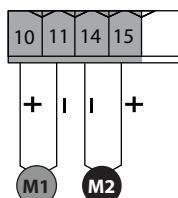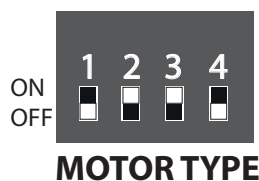


Red: Rosso - Roug - Rot - Rojo - Rood - Vermelho - κόκκινο - czerwony - красный - červený - kırmızı - Croato - Roşu - أحمر

Bleu: Blu - Bleu - Blau Azul - Blauw - Azul Μπλε - niebieski - синий - mo-dro - mavi - Croato - alabastru - أزرق

White: Bianco - Blanc - Weiß - Blanco - Wit - Brancov - Λευκή - biały - белый - bílá - Ak - Croato - Alb - أبيض



Brown: Marrone - Marron Braun - Maron - bruin - Castanho - καφέ - brązowy - коричневый - hnědý - kahverengi - Croato - Marro - بني

Green: Verde - Vert - Grün Verde - Groen - Verde Πράσινη - Green - Зеленый - Zelená - Yeşil - Croato - Verde - أخضر

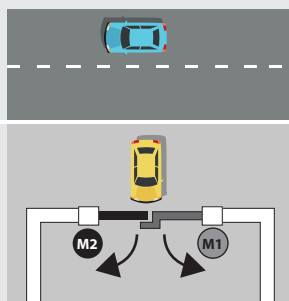


COME PROGRAMMARE LA SCHEDA - HOW TO PROGRAM THE BOARD
 COMMENT PROGRAMMER LA CARTE - PROGRAMMIERUNG DER REGISTERKARTE
 CÓMO PROGRAMAR LA TARJETA - HOE DE KAART TE PROGRAMMEREN
 COMO PROGRAMAR A PLACA - ΤΡΟΠΟΣ ΠΡΟΓΡΑΜΜΑΤΙΣΜΟΥ ΤΗΣ ΠΛΑΚΕΤΑΣ
 JAK ZAPROGRAMOWAĆ KARTĘ - ПРОГРАММІРОВАНИЕ ПЛАТЫ
 JAK NAPROGRAMOVAT KARTU - KARTIN NASIL PROGRAMLANACAĞI
 KAKO PROGRAMIRATI PLOČU - CUM SE PROGRAMEAZĂ PLACA DE CIRCUITE -

كيفية برمجة المجلس

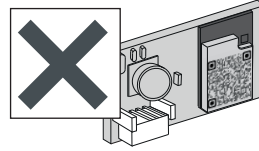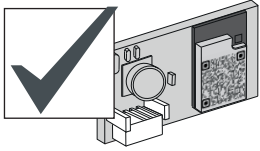

1

ON
OFF

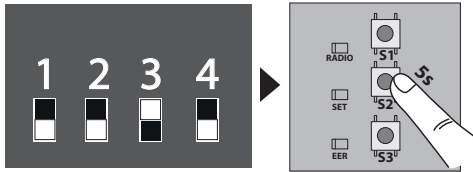

ADV

2



EasyAXS

3

(IT) Programmo il quadro con APP
 (EN) Programming the panel with APP
 (FR) Programmation du panneau avec APP
 (DE) Programmierung des Panels über die APP
 (ES) Programación del cuadro con APP
 (NL) Ik programmeer het paneel met de APP
 (PT) Programação do painel com APP
 (EL) Προγραμματίζω το πλαίσιο με την APP
 (PL) Programowanie centrali za pomocą aplikacji
 (RU) Программирование пульта с приложением
 (CS) Programování panelu pomocí aplikace
 (TR) Çerçeveyi APP ile programlıyorum
 (HR) Programiranje ploče pomoću aplikacije
 (RO) Program cu panou cu aplicație
 (AR) برمجة اللوحة باستخدام التطبيق

(IT) Programmo tramite TRIMMER e DIP SWITCH
 (EN) Programming via TRIMMER and DIP SWITCH
 (FR) Je programme par TRIMMER et DIP SWITCH
 (DE) Programmierung über TRIMMER und DIP-SCHALTER
 (ES) Programación mediante TRIMMER y DIP SWITCH
 (NL) Programmering via TRIMMER en DIP SWITCH
 (PT) Programar através de TRIMMER e DIP SWITCH
 (EL) Προγραμματισμός μέσω ΑΝΤΙΣΤΑΘΜΙΣΤΗ και ΔΙΑΚΟΠΤΗ DIP
 (PL) Programuję za pomocą TRIMMER i DIP SWITCH
 (RU) Программирую с помощью TRIMMER и DIP SWITCH
 (CS) Programování pomocí TRIMMER a DIP SWITCH
 (TR) TRIMMER ve DIP SWITCH ile program
 (HR) Programiranje preko TRIMMER-a i DIP prekidača
 (RO) Programare prin TRIMMER și DIP SWITCH
 (AR) البرمجة باستخدام "وحدة الضبط" و "مفتاح DIP"



AZIENDA CON
 SISTEMA DI GESTIONE
 CERTIFICATO DA DNV GL
 = ISO 9001 =
 = ISO 14001 =



U-Security



8 027908 796509 >

Bft
 www.bft-automation.com
BFT Spa
 Via Lago di Vico, 44 ITALY
 36015 Schio (VI)
 T +39 0445 69 65 11
 F +39 0445 69 65 22

SPAIN
 BFT GROUP ITALIBERICA DE
 AUTOMATISMOS SL
 Camí de Can Bassa, 6, 08401
 Granollers, Barcelona, Spagna

FRANCE
 AUTOMATISMES BFT FRANCE SAS
 50 rue Jean Zay
 69800 Saint-Priest, Francia

GERMANY
 BFT ANTRIEBSSYSTEME GMBH
 Faber-Castell-Straße 29, 90522
 Oberasbach, Germania

UNITED KINGDOM
 BFT AUTOMATION UK LTD
 Unit C2-C3 The Embankment Business
 Park, Vale Road Heaton Mersey Stockport
 Cheshire SK4 3GL United Kingdom

BFT AUTOMATION (SOUTH) LTD
 Enterprise House Murdock Road, Dorcan,
 Swindon, England, SN3 5HY

PORTUGAL
 BFT PORTUGAL SA
 Urb. Pedrulha lote 9 - Apartado 8123,
 3025-248 Coimbra Portugal

POLAND
 BFT POLSKA SP ZOO
 Marecka 49, 05-220 Zielonka, Polonia

IRELAND
 BFT AUTOMATION IRELAND
 Unit D3 City Link Business Park, Old Naas
 Road, Dublin

CROATIA
 BFT ADRIA DOO
 Obrovac 39, 51218, Dražice, Croazia

CZECH REPUBLIC
 BFT CZ SRO
 Ustecka 533/9, 184 00 Praha 8,
 Czech

TURKEY
 BFT OTOMASYON KAPI
 Şerifali Mahallesi, no, 34775
 Ümraniye/İstanbul, Turchia

U.S.A.
 BFT AMERICAS INC.
 1200 S.W. 35th Avenue Suite B Boynton
 Beach FL 33426

AUSTRALIA
 BFT AUTOMATION AUSTRALIA PTY
 29 Bentley St, Wetherill Park NSW
 2164, Australia

EMIRATES
 BFT MIDDLEEAST FZCO
 FZS2 AA01 - PO BOX 262200, Jebel Ali Free
 Zone South Zone 2, Dubai - United Arab

NEW ZEALAND
 BFT AUTOMATION NEW ZEALAND
 224/A Bush Road, Rosedale,
 Auckland, New Zealand